



Print 1 solid color PMS 676 C
Do not print dieline
Size: 8.5" x 5.5"



Visit us at www.woodzeez.com

Acorn Treehouse Assembly Instructions

Getting started

Batteries not included.


Battery installation

Instructions: Requires 3 x AAA 1.5V batteries.

Adult installation required



1. Locate the battery compartment on the bottom of the cottage.
2. Use Phillips head screwdriver (not included) to loosen the screws.
3. Install 3 new AAA (LR03/ R03) 1.5V batteries following the diagram inside the battery box.
4. Place the battery cover back on and tighten the screws to secure cover.
5. Snap in the leaves and branch.
6. Press down on the mailbox to turn on/off lights

REPLACING BATTERIES - 3 AAA (1.5V) batteries not included. Non-rechargeable batteries are not to be recharged. Rechargeable batteries are to be removed from the toy before being charged. Rechargeable batteries are only to be charged under adult supervision. Different types of batteries or new and used batteries are not to be mixed. Only batteries of the same or equivalent type as recommended are to be used. Batteries are to be inserted with the correct polarity. Exhausted batteries are to be removed from the toy. The supply terminals are not to be short-circuited.

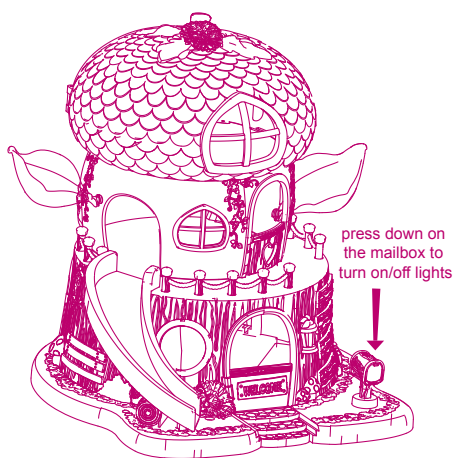

Remove the battery cover with screwdriver (not included)

Insert 3 AAA 1.5V in the battery box and screw the battery cover back.

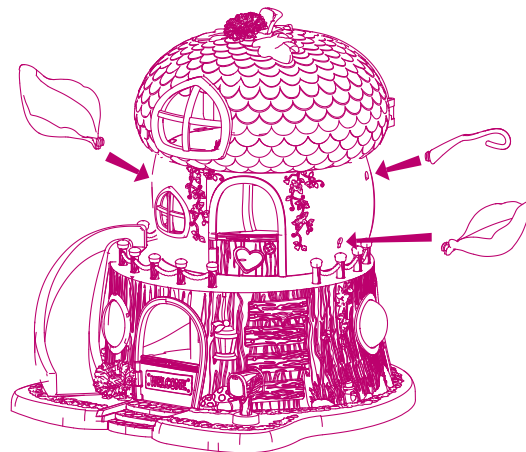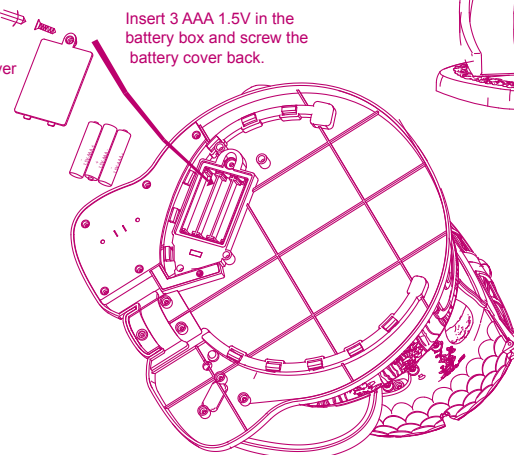

WARNING! Not suitable for children under 36 months due to small parts.

Please remove all packaging materials before giving to children.



WARNING:
CHOKING HAZARD - Small parts.
Not for children under 3 years.

Adult assembly required.

64701